


- 1. This tool supports simultaneous burning of multiple cameras and can plug in one, two, or three camera modules. However, we suggest that you take each step one by one to avoid errors.
- 2. Double click to open the "MultiBurnAP" tool and confirm:



名称	修改日期	类型	大小
S1M01	2024/11/11 10:45	文件夹	
S8M01	2024/11/11 10:46	文件夹	
MultiBurnAP	2020/11/23 17:21	应用程序	3,318 KB
MultiBurnConfig	2020/4/21 18:33	配置设置	1 KB
Operating instructions	2024/11/11 10:52	WPS PDF 文档	273 KB
SonixCamera (1).dll	2020/11/16 15:54	应用程序扩展	292 KB
SonixCamera (2).dll	2020/11/16 15:54	应用程序扩展	292 KB
SonixCamera (3).dll	2020/11/16 15:54	应用程序扩展	292 KB
SonixCamera (4).dll	2020/11/16 15:54	应用程序扩展	292 KB
SonixCamera.dll	2020/11/16 15:57	应用程序扩展	292 KB

名称	修改日期	类型	大小
S1M01	2024/11/11 10:45	文件夹	
S8M01	2024/11/11 10:46	文件夹	
MultiBurnAP		应用程序	3,318 KB
MultiBurnConfig		配置设置	1 KB
Operating instructions		WPS PDF 文档	273 KB
SonixCamera (1).dll		应用程序扩展	292 KB
SonixCamera (2).dll		应用程序扩展	292 KB
SonixCamera (3).dll		应用程序扩展	292 KB
SonixCamera (4).dll		应用程序扩展	292 KB
SonixCamera.dll		应用程序扩展	292 KB


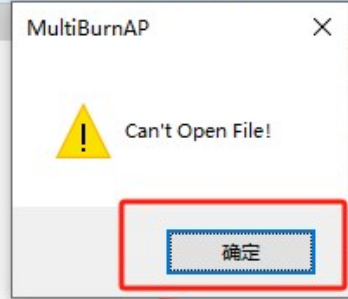


click

3. Select the file that needs to be burned and click Burn:

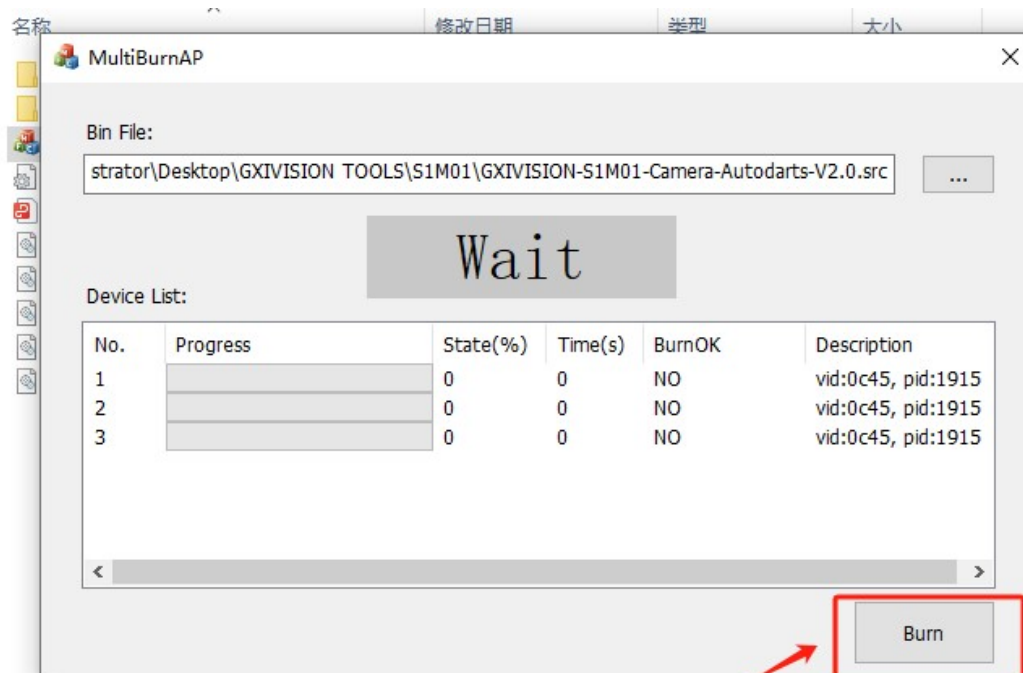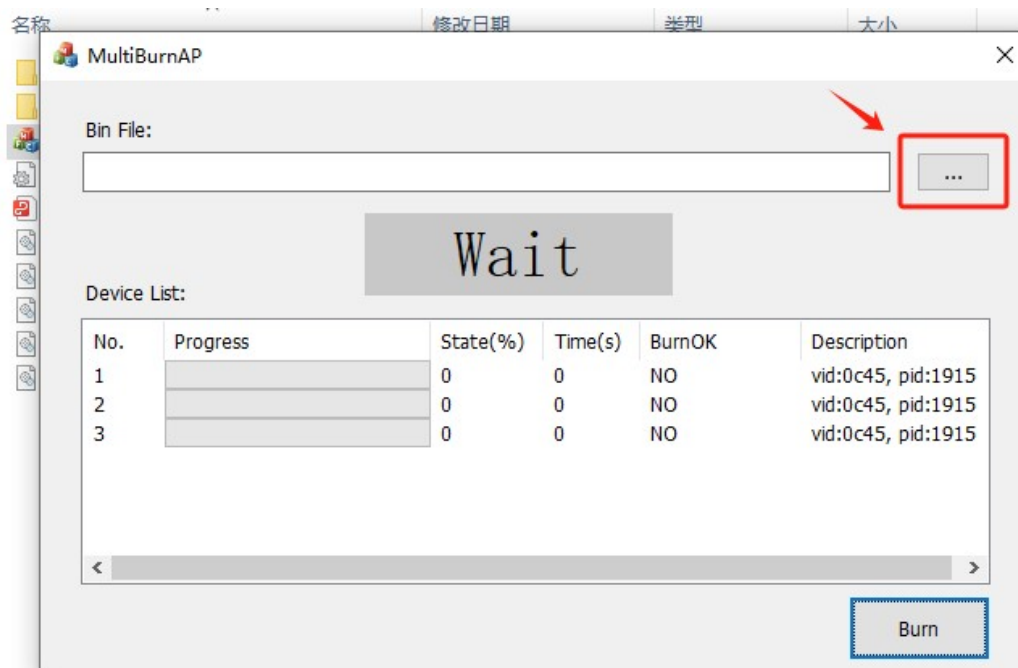

4. After waiting for the burning to complete, unplug the USB camera module:

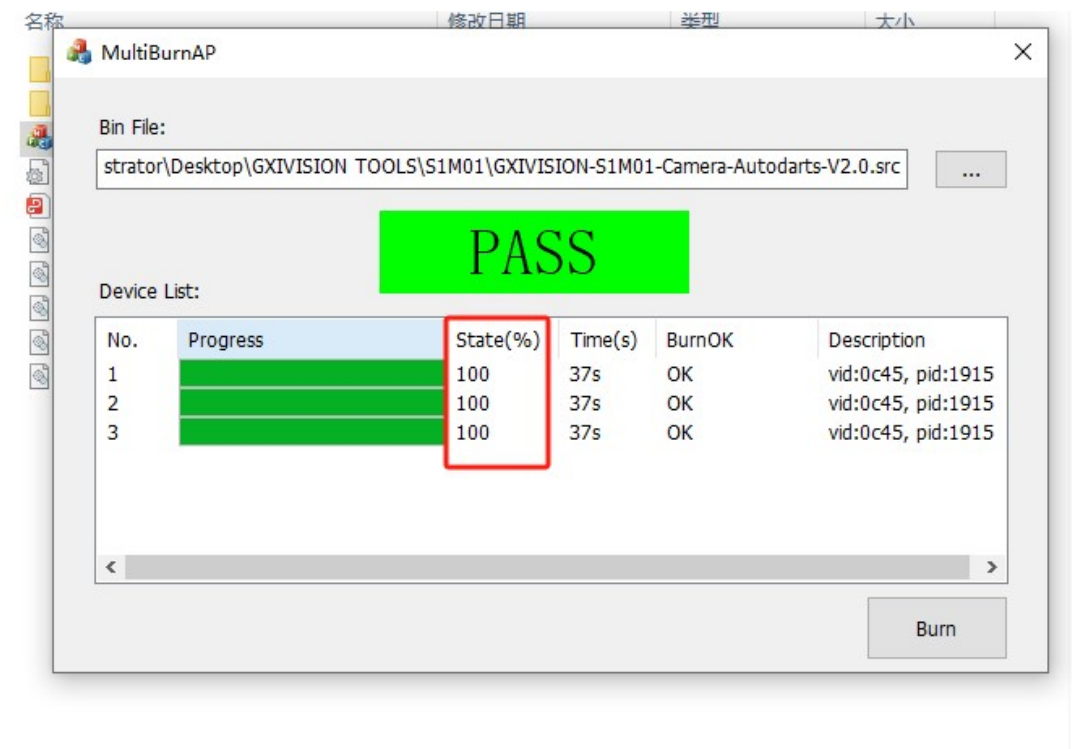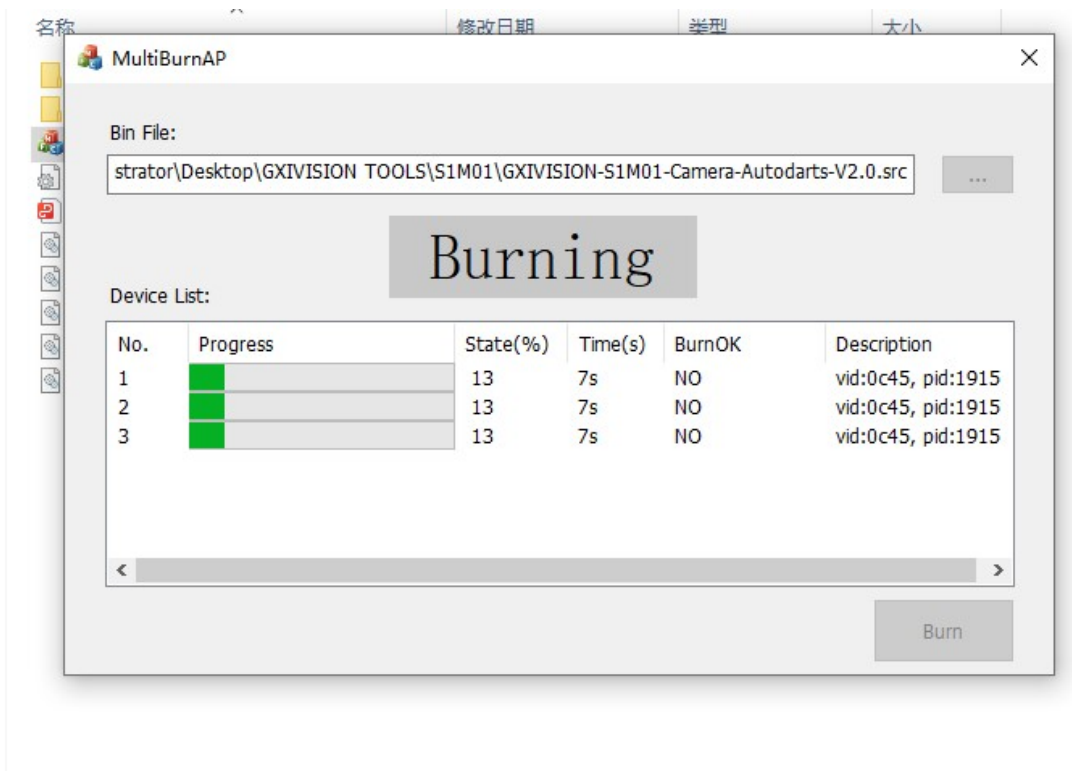

Attention: If there are abnormal problems such as poor contact during the burning process, it is necessary to redo the burning process:

